

Subject Production Change Notice	Station Calibration	Model Postage Australia
--	-------------------------------	-----------------------------------

Tools and Equipment:

- A. Tuning Pen

Procedure:



1. Press **CAL KEY** and plug in the 9V adaptor.
2. Scale will go to calibration mode, displaying:

0g Set
XXX ← **Base Frequency**

Note: The value of XXX (base frequency) should be between 400~2000 otherwise, the scale in normal mode will display ZERO LOW if the base frequency is less than 400 and ZERO HIGH if the base frequency is more than 2000. If the base frequency is not within the range of 400~2000 the VR should be adjusted located on the front right side of the lowercase using a tuning pen.

3. Press **SET KEY** and display will show

1kg Set

4. Put 1000g on the platform and press **SET KEY** and display will show

2kg Set

5. Put 2000g on the platform (**frequency at 2600~3500**) and press **SET KEY**. Display will be

RESTART

6. Unplug the adaptor and plug it back to restart.

NORMAL MODE:

1. Put 1000g on the platform and reading must be **1000g (+/- 1 g)**.
2. Put 2000g on the platform and reading must be **2000g (+/-1 g)**.
3. Put 1000g on the platform and press **TARE KEY**. Display will be '0'. Press TARE KEY again to go back to normal mode.

LODGEMENT ZONE SETTING:

1. Turn off the scale.
2. Press the **Airmail international key** before power input.
3. The display will prompt user for lodgment zone.
4. When prompted for the zone, select from the 16 domestic zone labeled keys. Each key toggles between two zones. Press enter.

Note: For Postage Australia default the lodgement zone to **N1**, to do this after procedure 3, press **Standard/Large Letter then press Enter**. N1 will appear on the LCD to signify it has been defaulted.

