



PS2000 AUSTRALIA

Electronic Postage Computing Scale OPERATING MANUAL

BASIC SERVICES AVAILABLE

- Standard Letter
- Large Letter
- Local Parcel
- Within 50km
- Parcel Post
- Express Post Parcel
- Express Post Australia B4 Size
- Express Post Australia C5 Size
- Express Post Australia Satchel 500g
- Express Post Australia Satchel 3kg
- Express Post Overseas B4 Size
- Express Post Overseas C5 Size
- Airmail International Standard Letter
- Airmail International Large Letter
- Airmail International Parcel
- Airmail Local Parcel
- Economy Air Parcel
- Sea Mail Parcel
- ECI Documents (formerly EMS Documents)
- ECI Merchandise (formerly EMS Merchandise)

BASIC TECHNICAL DETAILS

Capacity	: 3 kg including Tare
Graduation / Resolution	: 1g
Min start up weight detection	: >2 g
Minimum Weight	: 1g
Accuracy	: $\pm 0.1\%$ of reading ± 1 digit
Power consumption	: Approx. 0.35 watts
Weight of Unit Scale	: 1134g
Dimensions	: 26.5cm X 20cm X 8.3cm
Platform Size	: 20cm x 15cm
Power supply	: Mains via 9 Volts Main Adapter (Supplied) or 6 AA-size batteries
Tare	: 1 kg

OPERATION

Preparing the scale for use:


- 1) Fix the weighing platform to the body of the scale via the location points. The sloped edge of the platform should face the front part (keyboard).
- 2) Plug the mains adapter supplied with the scale into the mains and connect the adapter's output plug to the input socket at the rear of the scale.
- 3) Place the scale on a firm level surface, switch on the mains supply.
- 4) Press On/Off key and the display will show "Selftest..." for sometime after which the scale is ready for weighing and postage computing. This is the normal mode of the scale.
- 5) The default service as you power on the scale is local standard letter. The service is displayed at the first line of the LCD. The postage is shown at the lower left while the weight is at the lower right of the LCD.
- 6) Use the 'TARE/ENTER' key to zero the weight display. This is also useful for weighing items in containers.
- 7) Several error messages may appear in certain conditions. 'OVER LOAD!' indicates overload of the weight placed on the platform. 'ExcessWt' means that the weight exceeds the maximum for the service.
- 8) You need to set the lodgment zone or the address of the scale in order to get the correct postage for Parcel and Express Post. You only need to do this if it is your first time to use the scale or you want to change lodgment zone. Refer to the "How To's" section of this user manual.

PS2000 Australia Keyboard



Keyboard Functions



a. Standard/Large Letter

	<p>Standard and Large Letter services are toggled in one key. Press the 'Standard/Large Letter' key once to set the service to Standard Letter. Pressing it again will set the service to Large Letter. Standard Letter services are up to 250g only. Once it exceeds this weight limit, it will automatically switch to Large Letter. Large Letter services are limited to 500g only. Once it exceeds this weight limit, it will automatically switch to Parcel Post services. You need to enter destination zone for this service.</p>
---	--





b. Local Parcel/Within 50km

	<p>Local Parcel and Parcel within 50km services are toggled in one key. Press the 'Local Parcel/Within 50km' key once to set the service to Local Parcel. Pressing it again will set the service to Parcel within 50km.</p>
---	---


c. **Airmail International Letter**

		<p>While in Standard Letter service, press the Airmail key to set the service to Airmail International Standard Letter. User will then be prompted to enter a country code. While in Large Letter service, press the Airmail key to set the service to Airmail International Large Letter. User will then be prompted to enter a country code.</p>
---	---	--

d. **Airmail Local Parcel**


		<p>While in Local Parcel service, press the Airmail key to set the service to Airmail Local Parcel (only if weight is greater than 500g).</p>
		<p>While in Parcel Post service, press the Airmail key to set the service to Airmail International Parcel. User will then be prompted to enter a country code.</p>

e. **Express Post**

	<p>Pressing this key will prompt the user to select "AUSTRALIA or OVERSEAS". Pressing "AUSTRALIA" will prompt for the domestic Express Post prepaid envelopes or satchels. Pressing "OVERSEAS" will prompt for the Express Post International prepaid Envelopes.</p>
--	--


Note: Press the digit to activate the corresponding service desired.

e. **Parcel Post/Express Post**


	<p>Parcel Post and Express Post Parcel services are toggled in one key. Press the 'Parcel Post/Express Post' key once to set the service to Parcel Post. Pressing it again will set the service to Express Post Parcel. If weight is greater than 500g the scale will prompt the user to enter postcode or destination zone (1-18).</p>
---	---

Note: Refer to the Scale How To's section for setting the lodgment or destination zone.


f. **Economy Air/Sea Mail Parcel**

	<p>Economy Air and Sea Mail services are toggled in one key. Press the 'Economy Air/Sea Mail' key once to set the service to Economy Air Parcel. Pressing it again will set the service to Sea Mail Parcel. The scale will prompt the user to enter country code. When entering country code in Sea Mail Service, country codes falling under zones A (New Zealand) and B (Asia/Pacific) are not accepted. The scale will continue to ask for a country code. To cancel input, press CE key and the service becomes Standard Letter.</p>
---	--

g. **ECI Documents/ECI Merchandise**

	<p>ECI Documents and ECI Merchandise are toggled in one key. Press the 'ECI' key once to set the scale to ECIDocument mode. Pressing it again will set the scale to ECI Merchandise mode. The scale will prompt the user to enter country code.</p>
---	---

h. **Australia/Overseas**

	<p>Pressing this key while the service is domestic will set the service to its international counterpart. If the domestic service has no international counterpart, pressing this key will set the service to Airmail International Standard Letter.</p>								
	<p>Pressing this key while the service is international will set the service to its domestic counterpart. If the international service has no domestic counterpart, pressing this key will set the service to Standard Letter.</p>								
	<p>Refer to this table for the services that have international and domestic counterparts.</p>								
	<table border="1"> <thead> <tr> <th>Domestic</th> <th>International</th> </tr> </thead> <tbody> <tr> <td>Standard Letter</td> <td>Airmail International Standard Letter</td> </tr> <tr> <td>Large Letter</td> <td>Airmail International Large Letter</td> </tr> <tr> <td>Parcel Post</td> <td>Airmail International Parcel</td> </tr> </tbody> </table>	Domestic	International	Standard Letter	Airmail International Standard Letter	Large Letter	Airmail International Large Letter	Parcel Post	Airmail International Parcel
Domestic	International								
Standard Letter	Airmail International Standard Letter								
Large Letter	Airmail International Large Letter								
Parcel Post	Airmail International Parcel								

SUPPLEMENTARY SERVICES


All supplementary services are cleared when switching to another basic service. Pressing CE key will also clear all selected supplementary services.

1. Registered Post


	<p>Protects valuable articles due to specialized handling and documentation procedures, and provides proof of lodgment and delivery. A single rate of charge applies which is automatically added to the cost of the service(s) being shown on the display when this key is pressed.</p>
--	--

Note: For International services once this key is pressed the scale will prompt the user to select "SMALL or LARGE".


2. Insurance

	<p>Provides additional cover for articles over \$100, and proof of lodgment and delivery. Insurance should be used to obtain cover up to \$5000. Input the cover required by pressing the appropriate 0 - 9 keys (the scale will automatically switch to numeric input) and then press the "ENTER" key. The scale will automatically add on the appropriate charge for the value entered to the cost of the service(s) being shown on the display.</p>
---	--

3. Person to Person/Add Delivery Confirmation

	<p><u>Person to Person</u> - Provides proof of posting and signed record of delivery of articles. A single rate of charge applies which is automatically added to the cost of the service(s) being shown on the display when this key is pressed.</p>
	<p><u>Add Delivery Confirmation</u> - Provides the sender with a card signed by the recipient, proving that the dispatched article has been delivered. A single rate of charge applies which is automatically added to the cost of the service(s) being shown on the display when this key is pressed.</p>


4. Cash on Delivery

	<p>Collects charges for goods and/or postage. Two types of COD is available, COD where only the postage (including fees) is to be collected from the addressee, and COD PLUS with all other COD options. A single rate of charge applies which is automatically added to the cost of the service(s) being shown on the display when this key is pressed.</p>
---	--

Note: This key toggles between two types, first press selects COD and pressing it again selects COD PLUS service.




1. How to Set Lodgment Zone

Before using your new PS2000 scale, it is very important that it be told where it lives. This is necessary so that it will be able to assess postal charges from your location to any destination within Australia.

	During scale start-up, when the display is 'Selftest.....', press Express Post key. You will be prompted if you want to set lodgment zone or change FM settings. Press 1 to set lodgment zone and then enter the postcode corresponding to your zone. Press Enter. The scale restarts and the new lodgment zone will take effect.
---	---

2. How to Set Destination Zone

From Parcel Post/Express Post and if weight is greater than 500 the user is asked to enter destination zone. User can either enter from 1 -18, Post Codes or use the following keys:


			When prompted to enter postcode or destination zone, press Australia/Overseas key (Search key). Press Cash on Delivery or Registered Post key to navigate through the different destination zones. Press Enter once the desired destination zone appears.
---	---	---	---

3. How to Key-in Country Code

Country codes range from 100 to 593. Enter the specific country code of your choice and press Enter key to confirm. CE will clear the entry. You may refer to the table at the end of this manual for list of countries and corresponding country codes.

4. How to Change the Entered Country Code

Note: You can only change country code if there are no supplementary services selected with the current International service. Pressing CE key while there are selected supplementary services will clear these services. You can now press CE key to change the country code.


	Press the CE key to change the country code. Note that once you pressed this key, you cannot cancel country code input and go back to the previous country code that you entered. Instead, the service will be set to Standard Letter.
---	--

5. How to Key-in Insurance

Insurance ranges from 101 to 5000. Enter the specific value of your choice and press Enter key to confirm. CE will clear the entry.

6. How to Set Franked and Metered Rates (FM)

You can set your PS2000 Australia scale to display franked and metered rates as the default rates for international services.

	During scale start-up, when the display is 'Selftest.....', press Express Post key. You will be prompted if you want to set lodgment zone or change FM settings. Press 2 to change FM settings. Then press 1 to make non-FM rates as default or press 2 to make FM rates as default rates. The scale restarts and the new setting will take effect.
---	---

Parcel, Air Parcel, Express Post, Regular Parcel Zones

Post Code	Zone	Lodgment Zone	Post Code	Zone	Lodgment Zone
New South Wales					
0200-0299	N2	2	3921-3925	V2	4
1000-2263	N1	1	3926-3944	V1	3
2264-2484	N2	2	3945-3971	V2	4
2485-2486	N2/Q1*	17	3972-3978	V1	3
2487-2499	N2	2	3979	V2	4
2500-2530	N1	1	3980-3983	V1	3
2531-2554	N2	2	3984-3999	V2	4
2555-2574	N1	1	8000-8999	V1	3
2575-2639	N2	2	Queensland		
2640-2641	V2/N2*	18	4000-4224	Q1	5
2642-2647	N2	2	4225	N2/Q1*	17
2648	V2†	4	4226-4299	Q1	5
2649-2714	N2	2	4300-4449	Q2	6
2715	V2†	4	4450-4499	Q3	7
2716	N2	2	4500-4549	Q1	5
2717-2719	V2†	4	4550-4699	Q2	6
2720-2730	N2	2	4700-4805	Q3	7
2731-2739	V2†	4	4806-4899	Q4	8
2740-2786	N1	1	9000-9299	Q1	5
2787-2879	N2	2	9400-9596	Q1	5
2880	S2#	10	9597-9599	Q2	6
2881-2889	N2	2	9700-9799	Q1	5
2890	N1	1	9880-9919	Q2	6
2891-2898	N2	2	9920-9959	Q3	7
2899	NF	16	9960-9999	Q4	8
2900-2999	N2	2	South Australia		
Victoria			5000-5199	S1	9
3000-3220	V1	3	5200-5749	S2	10
3221-3334	V2	4	5800-5999	S1	9
3335-3341	V1	3	Northern Territory		
3342-3424	V2	4	0800-0999	NT1	11
3425-3443	V1	3	Western Australia		
3444-3688	V2	4	6000-6214	W1	12
3689-3690	V2/N2	18	6215-6699	W2	13
3691-3749	V2	4	6700-6799	W3	14
3750-3811	V1	3	6800-6999	W1	12
3812-3909	V2	3	Tasmania		
3910-3920	V1	4	7000-7999	T1	15

* Zone with lower charge is used.

† For charging purposes these Post Codes are considered to be part of Victoria.

Broken Hill (2880) is considered to be part of South Australia.

CALIBRATING THE PS2000 AUSTRALIA SCALE – FOR ADVANCED USERS ONLY

In case the scale loses its accuracy, then the re-calibration of the scale may be needed. The load cell of this precision scale is normally protected against overloaded weight applied slowly, but overload caused by dropping the scale or dropping something heavy on the scale may require re-calibration.

CAUTION: Please do not attempt any calibration by yourself unless you have exact 1000 g weight/s available. Otherwise the scale will render itself into a useless state and requires servicing. If the scale did come from a colder or warmer environment let it first stay for sometime to be at the same temperature as your current environment. Plug the mains adapter to the power supply. The scale will turn on and display ©Elane then Selftest. Press the "TARE/ENTER" key while it displays selftest. The scale will then ask you to put a 1kg weight on the platform. The scale will indicate that you need to wait as it automatically recalibrates the scale. When it is done, the scale will restart automatically.

Country List

CODE	COUNTRY OF DESTINATION	CODE	COUNTRY OF DESTINATION	CODE	COUNTRY OF DESTINATION
100	ABU DHABI	181	CAROLINE ISLANDS	262	GREECE
101	ADEN	182	CAYMAN ISLANDS	263	GREENLAND
102	ADMIRALTY ISLANDS	183	CELEBES	264	GRENADA
103	AFARS, FRENCH TERR	184	CENTRAL AFRICAN REP	265	GUADELOUPE
104	AFGHANISTAN	185	CEUTA	266	GUAM
105	AGELEGA ISLANDS	186	CEYLON	267	GUANTANAMO BAY
106	AITUTAKI	187	CHAD	268	GUATEMALA
107	AJMAN	188	CHAFARINAS	269	GUERNSEY
108	ALAND	189	CHAGOS ARCHIPELAGO	270	GUINEA
109	ALASKA	190	CHANNEL ISLANDS	271	GUINEA-BISSAU
110	ALBANIA	191	CHATHAM ISLANDS	272	GUYANA
111	ALDERNEY	192	CHES TERFELDU ISLANDS	273	HAWAII
112	ALEUTIAN ISLANDS	193	CHILE	274	HAINAN
113	ALGERIA	194	CHINA PEP REP OF C	275	HAITI
114	ALHUCEMAS	195	CHINA TAIWAN	276	HAWAII
115	ALL SAINTS	196	CHRISTMAS IS., PAC OCN	277	HERM
116	AMERICAN SAMOA	197	COLOMBIA	278	HERVEY ISLANDS
117	AMIRANTES	198	COMORO ISLANDS	279	HOKKAIDO
118	ANDAMAN ISLANDS	199	COMOROS	280	HONDURAS
119	ANDORRA	200	CONGO	281	HONG KONG
120	ANEGADA	201	COOK ISLANDS	282	HONSHU
121	ANGOLA	202	CORFU	283	HUNGARY
122	ANGUILLA	203	CORSICA	284	HUON ISLAND
123	ANJOUAN	204	COSTA RICA	285	ICELAND
124	ANIGUA	205	COTE D'IVOIRE	286	IFNI
125	ARGENTINA	206	CRETE	287	INDIA
126	ARMENIA	207	CROATIA	288	INDONESIA
127	ARUBA	208	CUBA	289	IRAN
128	ASCENSION	209	CURACAO	290	IRAQ
129	ATIU ISLAND	210	CYPRUS	291	IRELAND
130	AUSTRIA	211	CZECH REPUBLIC	292	IRIAN JAYA
131	AVARUA	212	D'ENTRECASTEAUX ISLANDS	293	IRISH REPUBLIC
132	AZERBAIJAN	213	DAHOMY	294	ISLE OF MAN
133	AZORES	214	DAITO ISLANDS	295	ISRAEL
134	BAHAMAS	215	DANGER ISLANDS	296	ISSAS, FRENCH TERR
135	BAHRAIN	216	DENMARK	297	ITALY
136	BALEARIC ISLANDS	217	DESIRADE	298	IVORY COAST
137	BALI ISLAND	218	DJIBOUTI	299	JAMAICA
138	BANGLADESH	219	DOMINICA	300	JAMMU
139	BANKS ISLANDS	220	DOMINICAN REP	301	JAN MAYEN
140	BARBADOS	221	DUBAI	302	JAPAN
141	BARBUDA	222	EASTER ISLAND	303	JAPEN ISLAND
142	BARRELEW ISLANDS	223	ECUADOR	304	JAVA
143	BASSAS DA INDIA	224	EGYPT	305	JERSEY
144	BELARUS	225	EL SALVADOR	306	JETHOU ISLAND
145	BELEP ISLAND	226	ELLICE ISLANDS	307	JOHORE
146	BELGIUM	227	ENDERBURY	308	JORDAN
147	BELIZE	228	EQUATORIAL GUINEA	309	JUNAGADH
148	BENIN	229	ERITREA	310	KALIMANTAN
149	BERMUDA	230	ESTONIA	311	KAMARAN ISLAND
150	BHUTAN	231	ETHIOPIA	312	KAMPUCHEA
151	BISMARCK ARCHIP	232	EUROPE ISLAND	313	KASHMIR
152	BISSAGOS ISLANDS	233	FALKLAND ISLANDS	314	KAZAKHSTAN
153	BOLIVIA	234	FANNING ISLAND	315	KEDAH
154	BONAIRE	235	FAROE ISLANDS	316	KELANTAN
155	BORKNEO	236	FERNANDO PO	317	KENYA
156	BOSNIA-HERZEGOVINA	237	FUJI	318	KERMADEC ISLANDS
157	BOTSWANA	238	FINLAND	319	KHAN YUNIS
158	BOUGAINVILLE	239	FORMOSA	320	KIRGHIZIA
159	BRAZIL	240	FRANCE	321	KIRIBATI
160	BRECHOU	241	FRENCH GUIANA	322	KOREA, DEM P'S REP OF
161	BRITISH ANTARCTIC TERR	242	FRENCH OCEANIA	323	KOREA, REP OF
162	BRITISH GUIANA	243	FRENCH POLYNESIA	324	KURIA MURIA ISLANDS
163	BRITISH HONDURAS	244	FRIENDLY ISLANDS	325	KUWAIT
164	BRITISH SOLOMON ISLANDS	245	FUJAIRAH	326	KYUSCHU
165	BRITISH VIRGIN ISLANDS	246	FUTUNA ISLAND	327	LABRADOR
166	BRUNEI	247	GABON	328	LABUAN
167	BUKA	248	GALAPAGOS ISLANDS	329	LACCADIVES
168	BULGARIA	249	GAMBIA, THE	330	LAOS
169	BURKINA FASO	250	GAMBIER ISLANDS	331	LAS PALMAS
170	BURMA	251	GAZA	332	LATVIA
171	BURUNDI	252	GEORGIA	333	LEBANON

172	CABINDA	253	GERMANY	334	LEEWARD ISLANDS
173	CAICOS ISLANDS	254	GHANA	335	LES SAINTES
174	CAMBODIA	255	GIBRALTAR	336	LESOTHO
175	CAMEROON	256	GILBERT ISLANDS	337	LIBERIA
176	CAMPBELL ISLANDS	257	GLORIEUSES ISLANDS	338	LIBYAN ARAB JAMAHIRIYA
177	CANADA	258	GOZO	339	LIECHTENSTEIN
178	CANARY ISLANDS	259	GRAHAM LAND	340	LIHOU
179	CANTON	260	GRANDE COMORE ISLAND	341	LITHUANIA
180	CAPE VERDE	261	GREAT BRITAIN	342	LOUISIAD E ARCHIPELAGO
343	LOYALTY ISLANDS	429	PERIM	515	ST JOHN
344	LUXEMBOURG	430	PERLIS	516	ST LUCIA
345	MACAU	431	PERSIA	517	ST MARIE
346	MACEDONIA	432	PERU	518	SI MAKTIN
347	MACIAS NGUEMA BIYOGO ISL	433	PESCADORES ISLANDS	519	ST PIERRE, MIQUELON
348	MADAGASCAR	434	PETER I ISLAND	520	ST THOMAS
349	MADEIRA	435	PHILIPPINES	521	ST VINCENT, GRENADINES
350	MALACCA	436	PHOENIX ISLANDS	522	SUDAN
351	MALAWI	437	PINE ISLAND	523	SULAWESI
352	MALAYSIA	438	PITCAIRN ISLAND	524	SUMATRA
353	MALDIVES	439	POLAND	525	SURINAME
354	MALI	440	PORTUGAL	526	SURPRIS ISLANDS
355	MALTA	441	PORTUGUESE GUINEA	527	SUWARROW
356	MALVINAS	442	PORTUGUESE TIMOR	528	SVALBARD
357	MANAHIKI	443	PRINCE EDWARD ISLAND	529	SWAZILAND
358	MANCHURIA	444	PRINCIPE	530	SWEDEN
359	MANGAIA	445	PUERTO RICO	531	SWITZERLAND
360	MANUA	446	PUKAPUKA	532	SYRIA
361	MANUAE ISLAND	447	QATAR	533	TADZHIKISTAN
362	MARCUS ISLAND	448	QUEEN MAUD LAND	534	TAHITI
363	MARIANA ISLAND	449	QUEMOY	535	TAIWAN
364	MAKIE GALANIE	450	RAKAHANGA	536	LANGANYIKA
365	MARQUESAS ISLANDS	451	RAOUL	537	TANGIER
366	MARSHALL ISLANDS	452	RAROTANGA ISLAND	538	TANZANIA
367	MARTINIQUE	453	RAS AL KHAIMAH	539	TENERIFE
368	MATSU	454	REUNION	540	THAILAND
369	MAUKE ISLAND	455	RHODESIA	541	TIBET
370	MAURITANIA	456	RHODOS	542	TIMOR
371	MAURITIUS	457	RIO MUNI	543	TOBAGO
372	MAYILLE ISLAND	458	ROMANIA	544	TOGO
373	MELILLA	459	ROSS DEPENDENCY	545	TOKELAU ISLANDS
374	MEXICO	460	RUSSIA	546	TONGA
375	MICRONESIA, FED STATE OF	461	RWANDA	547	TONGAREWA
376	MIDWAY	462	RYUKYU ISLANDS	548	TORRES ISLANDS
377	MITIARO	463	SABA	549	TORTOLA
378	MOHELI ISLAND	464	SABAH	550	TRENGGANU
379	MOLDAVIA	465	SAMOA, AMERICAN	551	TRINIDAD
380	MOLUCCAS	466	SAMOA, WESTERN	552	TRISTAN DE CUNHA
381	MONACO	467	SAN MARINO	553	TROBRIAND ISLANDS
382	MONGOLIA	468	SANTA CRUZ ISLANDS	554	TUAMOTU ISLANDS
383	MONTSERRAT	469	SAO TOME	555	TUBAI ISLANDS
384	MOROCCO	470	SARAWAK	556	TUNISIA
385	MOZAMBIQUE	471	SARDINIA	557	TURKEY
386	MUSCAT	472	SARK	558	TURKMENISTAN
387	MYANMAR	473	SAUDI ARABIA	559	TURKS ISLAND
388	NAMIBIA	474	SAVAGE	560	TUTUILA
389	NAURU	475	SAWAI	561	TUVALU
390	NEGRI SEMBILAN	476	SCHOUTEN ISLANDS	562	UGANDA
391	NEPAL	477	SCOTLAND	563	UKRAINE
392	NETHERLANDS	478	SELANGOR	564	UMM AL QAIWAIN
393	NETHERLANDS ANTILLES	479	SENEGAL	565	UNION ISLANDS
394	NETHERLANDS GUIANA	480	SEYCHELLES	566	UNITED ARAB EMIRATES
395	NEVIS	481	SHARJAH	567	UNITED ARAB REP
396	NEW CALEDONIA	482	SHIKOKU	568	UNITED KINGDOM
397	NEW GUINEA, INDONESIA	483	SHORTLAND ISLAND	569	UNITED STATES OF AMERICA
398	NEW GUINEA, PAPUA	484	SIAM	570	UPOLU
399	NEW HEBRIDES	485	SICILY	571	UPPER VOLTA
400	NEW ZEALAND	486	SIERRA LEONE	572	URUGUAY
401	NEWFOUNDLAND	487	SIKKIM	573	USA
402	NICARAGUA	488	SINGAPORE	574	UZBEKISTAN
403	NIGER	489	SLOVAK REPUBLIC	575	VANCOUVER ISLAND
404	NIGERIA	490	SLOVENIA	576	VANUATU
405	NIUE	491	SOCIETY ISLANDS	577	VATICAN CITY STATE
406	NOCOBAR ISLANDS	492	SOCOTRA	578	VENEZUELA
407	NORTH KOREA	493	SOLOMON ISLANDS	579	VIETNAM
408	NORTHERN IRELAND	494	SOMALIA	580	VIRGIN IS., BRITISH

409	NORWAY	495	SOUTH AFRICA	581	VIRGIN IS., USA
410	NOSSI BE ISLANDS	496	SOUTH GEORGIA ISLANDS	582	VOLCANO ISLANDS
411	OCEAN ISLAND	497	SOUTH KOREA	583	WAKE
412	OKINAWA	498	SOUTH ORKNEYS	584	WALLIS
413	OMAN	499	SOUTH SANDWICH ISLANDS	585	WALPOLE ISLANDS
414	PAGO PAGO	500	SOUTH SHETLANDS	586	WALVIS BAY
415	PAHANG	501	SOUTH WEST AFRICA	587	WASHINGTON ISLANDS
416	PAKISTAN	502	SOUTHERN RHODESIA	588	YEMEN REPUBLIC
417	PALAU ISLANDS	503	SPAIN	589	YUGOSLAVIA
418	PALMERSTON	504	SPANISH GUINEA	590	ZAIRE
419	PANAMA	505	SPANISH SAHARA	591	ZAMBIA
420	PANAMA CANAL ZONE	506	SPANISH SOV. IN N. AFR	592	ZANZIBAR
421	PAPUA NEW GUINEA	507	SPITZBERGEN	593	ZIMBABWE
422	PARAGUAY	508	SPORADES		
423	PAUMOTU ISLANDS	509	SRI LANKA		
424	PEMBA	510	ST BARTHOLOMEW		
425	PENANG	511	ST CHRISTOPHER, NEVIS		
426	PENGHU LIEHIAO ISLAND	512	SI CROIX		
427	PENRHYN	513	ST EUSTATIUS		
428	PERAK	514	ST HELENA		