

Changes in Postal Rates

The Postage France scale has an easy to replace Data Memory Chip, which contains all the rates for the basic and add-on services available on the scale. When rates change, a new chip is automatically sent to all registered users with full details of how to remove the existing chip and insert the new one.

Calibrating the scale

Going to the Calibration Mode

- 1) Remove the weight from the platform (if any), and unplug the adapter to turn the scale OFF.
- 2) While pressing "Lettre" key, plug-in the adapter to turn the scale ON.
- 1) Now the scale is in "Calibration Mode", and the LCD will display "CAL MODE" momentarily and then it will display "0kg Set" on the first line and " XXX" in the second line where XXX is approximately 260 – 500.

0Kg	Set
	355

- 4) Press the "AR" key without a weight on the platform (0kg), then place 1kg and 2kg and press "AR" respectively as instructed on the LCD.
- 5) When the scale displays "RESTART", the Calibration has completed. Unplug the adapter to turn the scale off and then plug it in to ON it.



Postage France Electronic Postage Computing Scale

OPERATING MANUAL

BASIC SERVICES AVAILABLE

- ? Lettres (LT)
- ? Ecopli (EC)
- ? Colieco (CO)
- ? Colissimo Intra. Depart (CI)
- ? Colissimo Extra. Depart (CE)
- ? Prioritaires (P1 – P6)
- ? Economiques (E1 – E6)

ADD-ON SERVICE AVAILABLE

- ? R1, R2, R3, R, AR

SPECIAL FEATURES


- ? Strain Gage Loadcell Technology.
- ? Fold-up platform for weighing large letters
- ? Euro currency display

BASIC TECHNICAL DETAILS

Maximum Capacity	: 2000 g (Excluding Tare)
Maximum Tare	: 500 g
Accuracy	: 1 g
Power Supply	: 9 volt AC adapter
Power Consumption	: Approx. 350mW
Dimensions/Weight	: Overall: 7¾" x 5½" x 2¼"
Platform	: 5" x 5½" (opens for flats)
Unit Weight	: 520 g

Packaged Weight : 875 g

FIGURE 1: Keyboard Layout and LCD Display

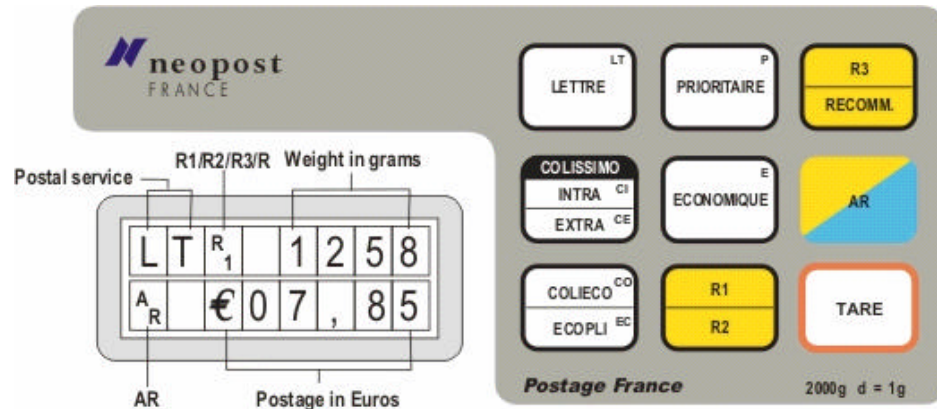

INSTRUCTIONS

A. START-UP INSTRUCTIONS and DISPLAY

- ? Plug the mains adapter supplied with the scale into the mains and connect the adapter's output plug to the input socket at the rear of the scale.
- ? Place the scale on a firm level surface then switch on the mains supply.
- ? The Scale will turn-on automatically. The Scale will then go through an electronic self-test for 1 second. The Scale wakes up in the "Lettre" mode.

THE DISPLAY

o SERVICE

The default display shows the service on the leftmost part of the first line of the LCD. In this case, Service 'LT' is the default. If in Prioritaires or Economiques mode, the zone is also displayed next to the service code.

o WEIGHT

The weight is displayed at the rightmost part of the first line.

o POSTAGE

On the second line, below the weight is the corresponding postage.

o SPECIAL SERVICE

If with special service, 'R' and the appropriate number is displayed next to the service code. AR is denoted by 'AR'.

- ? It is recommended to leave the scale always plugged in – do not switch off mains power socket. A small current will keep the weighing mechanism in operating temperature even while the scale is off.
- ? To tare the current weight on the scale, press the 'Tare' key. All subsequent weight displays are tare.

B. POSTAL SELECTIONS (Please refer to Figure 1.)

Basic Postal Services

The code of service for the following appears as an alphanumeric value in the LCD display.

? **Lettres (LT)**

The Scale wakes up in mode for Lettres.

? **Ecopli (EC)**

? **Colieco (CO)**

Colieco toggles with the Ecopli service mode.

? **Colissimo intra. Depart (CI)**

? **Colissimo extra. Depart (CE)**

Colissimo Extra toggles with the Colissimo Intra service mode.

? **Prioritaires (P1-P6)**

First press displays the rates to Zone1 (P1). Press again to display the rates for Zone2 (P2) up to Zone6 (P6).

? **Economiques (E1-E6)**

First press displays the rates to Zone1 (E1). Press again to display the rates for Zone2 (E2) up to Zone6 (E6).

Special Services (Please refer to Figure 1.)

? **R1, R2, R3, R**

Pressing any of these Special Services keys will add the corresponding add-on rate. The scale will display "ERREUR" if the Special Service is not allowed.

? **AR**

AR is only available when a special service is already selected prior to it.

*Some basic services are limited in terms of special service availability.